

# Retro/SuperDeck INSTALLATION INSTRUCTIONS

**DO NOT PROCEED WITH INSTALLATION UNTIL YOU HAVE READ ENTIRE INSTRUCTIONS INCLUDING WARNINGS**



## WARNING



**DO NOT WORK ON ROOF IF SURFACE IS WET, FROSTED, ICE OR SNOW COVERED**

**USE LADDERS SAFELY**

**USE HAND & EYE PROTECTION WHEN WORKING WITH POWER TOOLS**

**USE EXTREME CAUTION TO AVOID CONTACT WITH POWER LINES. CONTACT WITH POWER LINES, ELECTRIC LIGHTS OR POWER CIRCUITS MAY BE FATAL**

**BEFORE DRILLING, MAKE SURE THERE ARE NO WIRES OR PIPES BEHIND AREA OF HOLE**

Installation of this product should be attempted only by individuals skilled in the use of the tools and equipment necessary for installation. Protect yourself and all persons and property during installation. If you have any doubt concerning your competence or expertise, consult a qualified expert to perform the installation.

R.S.T.C. Enterprises Incorporated assumes no responsibility or obligation for the failure of an architect, contractor, installer, or building owner to comply with all applicable laws, building codes and requirements, and adequate safety precautions.

## One Year Limited Warranty

**Important:** Evidence of original purchase is required for warranty service.

**WARRANTOR: RSTC Enterprises Incorporated**

**ELEMENTS OF WARRANTY:** RSTC warrants for one year to the original retail owner, this RetroDeck/SuperDeck is free from defects in materials and craftsmanship with only the limitations or exclusions set out below

**WHAT IS NOT COVERED:** This warranty covers only defects in materials and workmanship provided by RSTC Enterprises. and does not cover equipment damage or malfunction from misuse, abuse, accident, act of God. Installation must be in accordance with our written instructions. **RSTC Enterprises will not be liable for any installation charges associated with replacement, incidental or consequential damages resulting from your use of or inability to use the RetroDeck/SuperDeck**

**REMEDY:** Your only remedy under this warranty is the exchange or replacement in the event that the product does not conform to this warranty.

**CLAIMS PROCESS:** To make a claim under this warranty, the product should be shipped postage paid, with original purchase receipt to:

**RSTC ENTERPRISES  
2715 HOGARTH ST SUITE 4  
EAU CLAIRE, WI 54703**

**1 - 866 -FOR- RSTC or www.commdeck.com**

## TOOLS & PARTS LIST

Pry Bar

Roof Cement

1/2" wrench

Marker

#2 Phillips Drive Bit

5/16" Nut Driver


Stud Finder

Measuring Tape


1/2" Nut Driver




5/16" Star Nut



3/4" x 5/16" Cap Bolt




3/4" Tek Screw



2" Trusshead Screw

### RETRODECK

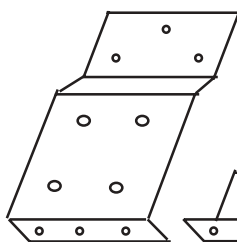


DECK PLATE

BASE PLATE

Retro/Superdeck are designed to be installed centered over a truss for maximum strength

### SUPERDECK

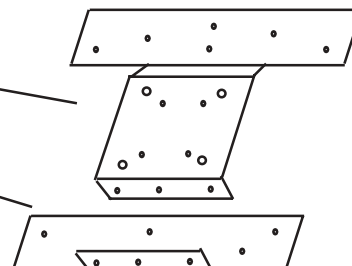

SuperDeck flashing is 16" wide with a universal hole pattern for dishes between 18" - 36"



**STEP**  
**1**

Locate truss with stud finder, lift shingles with prybar at dish location, do not lift middle row



**STEP**  
**2**

Before screwing base plate to roof, align both base & deck plate to assure shingles will fall into place



**STEP**  
**3**

Install base plate with trusshead screws



**STEP**  
**4**

Install foot on deck plate with cap bolts



**STEP**  
**5**

Slide deck under top shingle and seat over base




**STEP**  
**6**

Use Tek screw to secure deck to base plate



**STEP**  
**7**

Install deck plate using trusshead screws, use small amount of roof cement under top shingle to secure

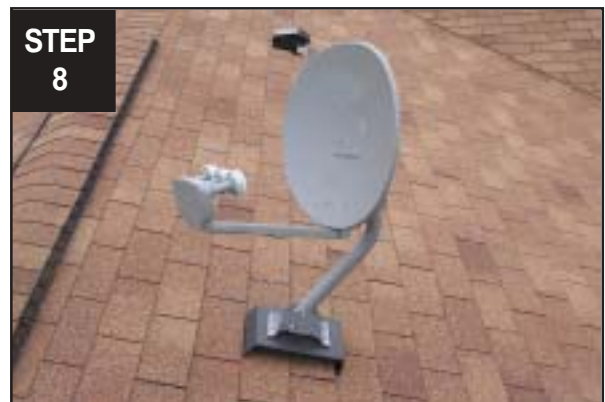

**STEP**  
**8**

**COMPLETED INSTALL**